

# airoma

mvp automatic air freshener



**The Airoma system provides flexible programming options which allow costs to be fixed and ensures that fragrance delivery and odour control are matched to location conditions.**

Real-time programme allows user to set a start time, hours of operation and days of operation, therefore conserving refill life for the hours the business is open. Intensity Plus Event Timer - IPE® feature - allows three preset times when the dispenser will provide more fragrance for busy times in the location.

'Easy' or 'rent' button - If full programmability is not required the user may select the 'rent' button for quick and easy

programming. This feature allows 30, 45, or 60 day settings. No alarm features are activated.


Programme verification to confirm all programmed settings and operation times.

Unique faceplate system provides facility for customer private labelling.

Effective in room sizes up to 6000ft<sup>3</sup> / 200m<sup>3</sup>.

Key locked dispenser to prevent theft of batteries and consumables.

NZFSA (New Zealand Food Safety Authority) compliant.

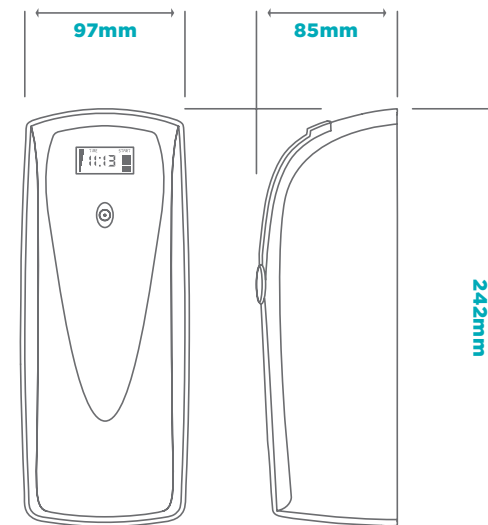

Range of high quality fragranced aerosols.

Airoma X-pel insect repellent and insecticide also available.

3000 sprays per refill.

Standards:

75/324/EEC  
94/1/EC  
99/45/EC  
2001/60/EC

**Hands Free Hygiene**

Ph: 1800 039 764

sales@handsfreehygiene.com.au

handsfreehygiene.com.au