

STS1500BM

Electronic Basin Tap

6 Star 6lpm



SMARTEC Electronic Single Temperature Angled Bench Mounted Basin Tap
- Mains and Battery Powered

Technical Information:



Material	Brass/ Plastic Solenoid Valve
Inlet Valve	15mm (Flexible Connection)
Outlet	15mm Aerator
Working Pressures	50kpa - 500kpa
Max Working Temp.	50°C
Valve	6 Volts Solenoid (15mm connect
Finish	Chrome Plated
Servicing	Regular Maintenance
Warranty	2 Years*



STS1500B Electronic Single Temperature Angled Bench Mounted Tap - Battery Powered
STS1500M Electronic Single Temperature Angled Bench Mounted Tap - Mains Powered

Features:

- Run time, sensitivity and dead flush are programmable by remote control
Extension leads available
- Supplied with inlet strainer and flow controller
- Digital Technology in sensor
- IP rated control box enclosure houses the solenoid valve and waterproof connections
- Battery or Mains options also available
(Can be changed after installation)

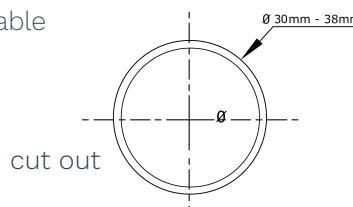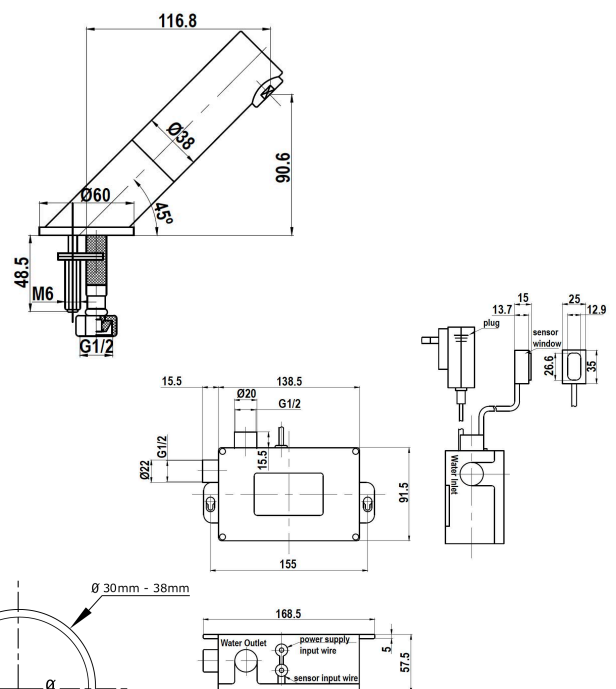

Hands Free Hygiene

Ph: 1800 039 764

sales@handsfreehygiene.com.au

handsfreehygiene.com.au