

SMARTEC PLUS



Electronic Wall Mounted Tap

6 Star 6lpm

PLUS2500BM

Electronic Single Temperature Wall Mounted Tap - Battery and Mains Powered

Technical Information

Materials	Stainless Steel / Engineering Grade Plastic Solenoid Valve
Inlet	15mm BSP Female Flexible Hose
Outlet	Laminar Flow
Working Pressures	50kPa - 500kPa
Max Working Temp.	50°C
Valve	6 Volt Solenoid (15mm connection)
Finish	Chrome Plated
Servicing	Low Maintenance
Warranty	2 Years*

Product Features

- Drain down angled smooth bore spout for improved infection control
- Advanced laser technology for precise sensor actuation
- Sensor range adjustable programming
- Hygiene Flush* and Alternate Run Times programmed ex-works
- Integral line strainer minimises fouling by debris
- IP67 rated solenoid control enclosure with waterproof connections
- Hygiene Flush programming minimises the risk of Legionella from infrequently used fixtures


Product Standards and Certifications



WELS Registration Number: T17974(V)

Related Products

See page 2

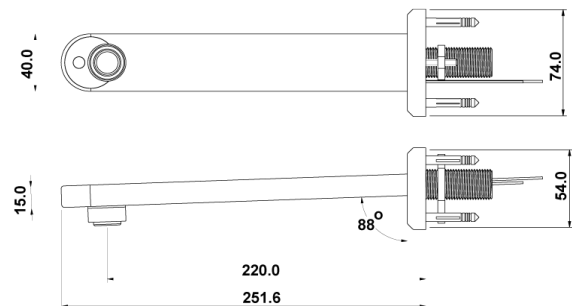

All measurements are in millimeters and are to be used as a guide only

Hands Free Hygiene

P: 1800 782 088 | sales@handsfreehygiene.com.au

Handsfreehygiene.com.au

Description

Product Information

Technical Drawings

Related Products

PLUS2500B	SMARTEC PLUS Polished - Battery Powered
PLUS2500M	SMARTEC PLUS Polished - Mains Powered
PLUS2500SB	SMARTEC PLUS Satin Finish- Battery Powered
PLUS2500SM	SMARTEC PLUS Satin Finish- Mains Powered
PLUS2500SBM	SMARTEC PLUS Satin Finish - Battery and Mains Powered

Power Box Line Drawing

