




hands free hygiene
clean hands, safe hands

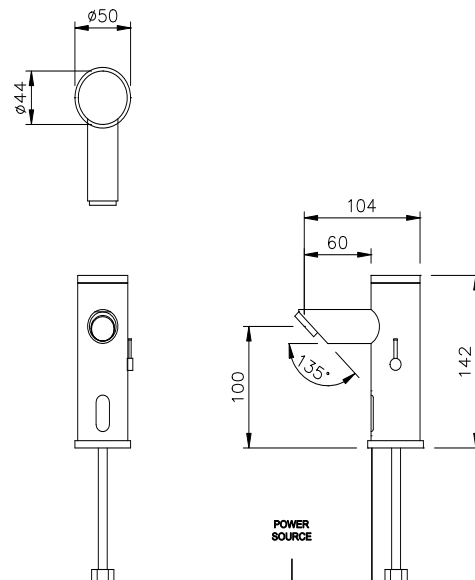

DB250 / DB275

DOLPHIN ELECTRONIC INFRARED TAP WITH TEMPERATURE ADJUSTMENT LEVER

- › WRAS Approved product
- › Touch Free Tap – for ultimate hygiene – prevents cross contamination
- › Quality polished or brushed chrome plated brass finishes available from stock – other finishes available to special order
- › Water Supply: hot and cold supply featuring temperature adjustment lever
- › Flow rate – 3.8 litres/minute with our standard fitted flow regulator at any pressure between 0 and 6 bar (other flow rates such as 1.89 and 1.33 LPM available to special order – please enquire)
- › Flow time once user's hands are removed from the tap – 1 second (adjustable by using remove control DB51)
- › Interchangeable STD M22/24 Neoperl Aerator insert
- › Tap settings may be adjusted by using remote control (DB51)
- › Mandatory Hygiene Flush feature can be specified to combat Legionella
- › 2 year manufacturer's warranty
- › Power connections: tap: male / power source: female
- › Complies with SKA rating criteria
- › The two flexible connectors contain integral check (non-return) valves
- › We recommend our Dolphin Blue DB61 TMV3 be used in conjunction with this tap
- › Our low flow taps are fully BREEAM compliant and contribute to up to five BREEAM WAT 1 credits.

HEIGHT	142 MM
DIAMETER	50 MM
PROJECTION	60 MM

- › Power Source: 9 Battery / Plug-in 9 Volt transformers
- › Power connections: tap: male / power source: female
- › 3/8" BSP water supply connector
- › Maximum water temperature 70°C
- › Operating pressure 0.5 - 8.0 bar (7 - 116 PSI)
- › Min-Max thickness: 2-27mm
- › Counter Hole: diameter 28-34mm
- › Minimum/maximum thickness: 2-27mm

PRODUCT CODES

BATTERY POWERED

- › Polished Chrome **DB250C**
- › Brushed/Satin Chrome **DB250S-2**

TRANSFORMER POWERED

- › Polished Chrome **DB275C**
- › Brushed/Satin Chrome **DB275S-2**

Hands Free Hygiene

Ph: 1800 039 764

sales@handsfreehygiene.com.au

handsfreehygiene.com.au