

# Presto Volta

**Presto Volta** Sensor taps offer better hygiene and water savings, with a flow rate of 4 L/min.

## Water Savings

Presto sensor taps supply just the right amount of water required for each wash.

## Reliability

The active infrared sensor activates the flow of water automatically whenever a user's hands are detected under the spout of the tap. The tap then shuts off automatically within 2-3 seconds of their hands being removed from the detection zone.

## Comfort & Hygiene

Presto Volta is sensor activated, making it very hygienic for users as they do not have to touch the tap to start or finish washing their hands.

## Vandal Resistance

All operating components of the battery version of the Presto Volta are fully enclosed in the tap's body to minimise the potential for vandalism. The mains/transformer version is also fully enclosed, with the exception of the transformer.

## Easy Installation & Maintenance

Presto Volta is supplied ready to install, complete with non-return valves, strainers and inlet hoses. Maintenance is straightforward - the tap's casing can be opened by unscrewing a small screw on the underside of the spout.

## Approvals



## Technical Features

**Flow rate** 4 L/min

### Working Pressure

Max Static: 1000kPa

Min Dyn: 100kPa

Max Dyn: 500kPa

### Working temperature

Rec. max temperature of 65°C (75°C for no more than 30 minutes)

**Materials** Body: Chrome plated zinc alloy

Base mounting plate: DR brass

## Power Supply Features

**Battery Lifespan** 3 years based on 125,000 cycles/year (at 40 cycles per hour over 8 hours per day).

**LED Communication** Weak battery will cause LED to blink continuously.

**Power failure:** Tap shuts off automatically and will re-activate when power supply returns.


## Warranty

2 years subject to manufacturer's conditions.

Description	Part No
Presto Volta sensor tap – battery	P55066
Presto Volta sensor tap – mains	P55053
Presto Volta sensor mixer tap – battery	P55169
Presto Volta sensor mixer tap – mains	P55154


Presto Volta Sensor Tap

(mains version with transformer shown)

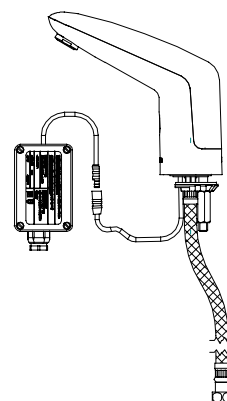

Presto Volta Sensor Mixer Tap

(battery version shown)

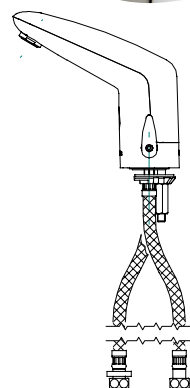

## More Information

Download product manuals, data sheets, specification sheets, line drawings and brochures from our website.

[www.handsfreehygiene.com.au](http://www.handsfreehygiene.com.au)



Hands Free Hygiene

P: 1800 782 088 | [sales@handsfreehygiene.com.au](mailto:sales@handsfreehygiene.com.au)

[Handsfreehygiene.com.au](http://Handsfreehygiene.com.au)

