

## 01 Presto Volta Sensor Tap



## 02 Product Part Numbers

Product Description	Part No
Presto Volta Sensor Tap - Battery	P55066
Presto Volta Sensor Tap - Mains	P55053

\* Mixer versions also available.

## 03 To Specify

Basin mounted sensor tap. Incorporates a 4 L/min flow regulator, infra-red sensor, solenoid valve and 6 volt lithium battery enclosed within the tap body. Also available with an external 240V AC/7V DC (IP65) transformer for connection to mains power. Approvals: AS/NZS 3718, WELS 6 stars.

## 04 Approvals



## 05 Drawings & Documentation

Visit our website to download additional information about this product, including the brochure, product manual, CAD and Revit family files.

**Hands Free Hygiene**


P: 1800 782 088 | [sales@handsfreehygiene.com.au](mailto:sales@handsfreehygiene.com.au)

[Handsfreehygiene.com.au](http://Handsfreehygiene.com.au)

## Line Drawings

06

*Presto Volta Sensor Tap - Battery*

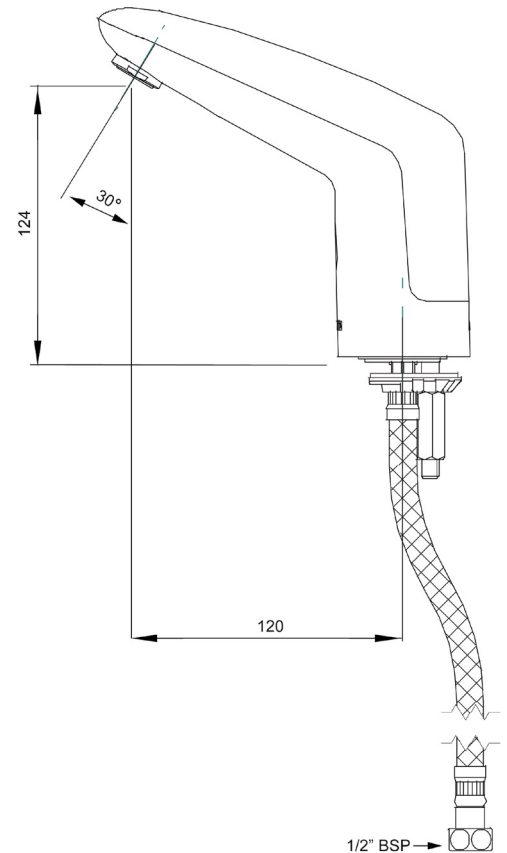

*Presto Volta Sensor Tap - Mains*

