

Recharges with water flow

Touchless sensor taps recharge when running



Touchless sensor taps produce their own power. Flowing water generates power to recharge the touchless tap. No mains supply required eliminating standby power consumption. The perfect solution for everyone who sets a high value on sustainability and ecology.

Geberit's mini power station

A small generator makes the touchless taps independent from the mains power supply or battery power. Whenever the tap is in use, the flowing water charges the accumulator via the hydroelectric turbine which produces electricity. The electricity loads the accumulator making sure the tap is operational at any time.

Top eco-balance

This system reduces the ecological impact by 50% compared to the use of batteries and 80% compared to an electrical connection. The ideal solution for sustainable projects.

Simple installation without additional power supply

Easy to install in a standard bathroom. No power point is required reducing cost, saving power and


eliminating the issue of changing flat batteries. The energy accumulator has an operating life of at least 10 years, when it is used regularly. The installation is quick and almost tool-free. All settings can be remotely accessed with a service remote. The generator is installed under the basin at the isolating valve.

Pre-installed power cables run with the water supply to the base of the tap.

Recharges with water flow

The self sustainable solution


1

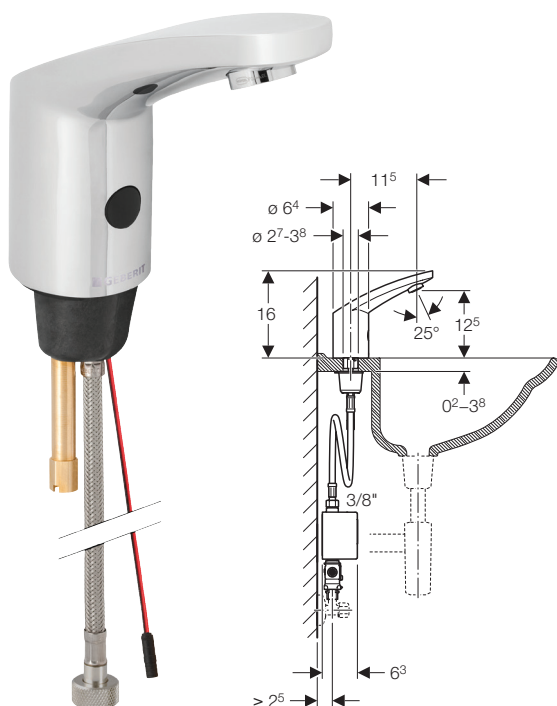

Geberit sensor tap type 185

- ① Generator with below desk mixer
→ Art. number 116.365.21.1

2

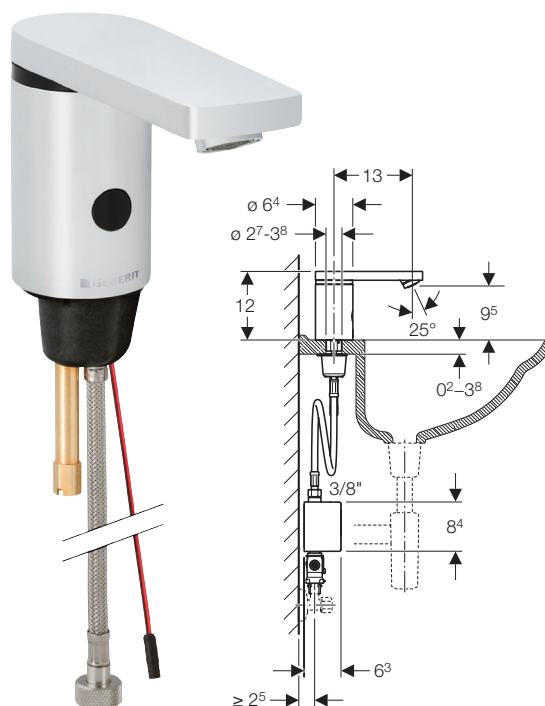

Geberit sensor tap type 186

- ② Generator with below desk mixer
→ Art. number 116.366.21.1

Ecology	Self powered generator
Installation	Directly on angle valve
Self-Sustaining Up From	<ul style="list-style-type: none"> • 20 uses / day • 4 second operating time / use • Flow rate 3 l / min
Low Voltage Signal	Signal at the tap sensor
Service Handy Remote	Convenient programming (sold separately)
Warranty	2 years

Hands Free Hygiene

Ph: 1800 039 764

sales@handsfreehygiene.com.au

handsfreehygiene.com.au


hands free hygiene
clean hands, safe hands