

CAT 67911


Sensor Tap - Classic Curve Neck Deck Mounted - Chrome Plated

Dimensions:

Curve Neck Spout - 15cm high

Tap: 15 x 18 x 6cm, 1.2kg

Boxed: 28 x 22 x 9cm, 2.1kg

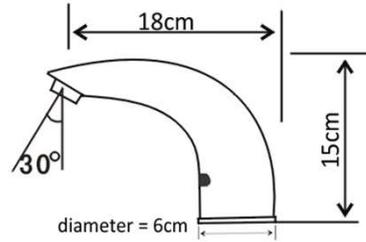

Features:

Employs the latest plug and play digital infrared sensor technology.
Hygienic – zero cross contamination.
No-touch and easy to use – ideal for children, elderly & disabled
Simple installation – supplied with everything you need and easily replaces existing ½" connections.
No electrical wiring required – takes 4 x AA batteries or use the 240 V transformer included.
AUS & NZ WaterMark certified
6 star WELS water efficiency rating.

Includes:


Curve Neck spout with fitted sensor.
Braided hose.
Solenoid box - fitted with solenoid valve and battery housing.
Optional 240V transformer (only used if not using batteries)
Instruction manual.

Specifications:

Deck Mounted
Chrome Plated
Standard ½" connection
Adjustable sensing: 5cm to 22cm
Water Pressure: 0.07-0.7Mpa

Available in two colors

- CAT 67911 – Chrome Plated
- CAT 67911B – Matte Black

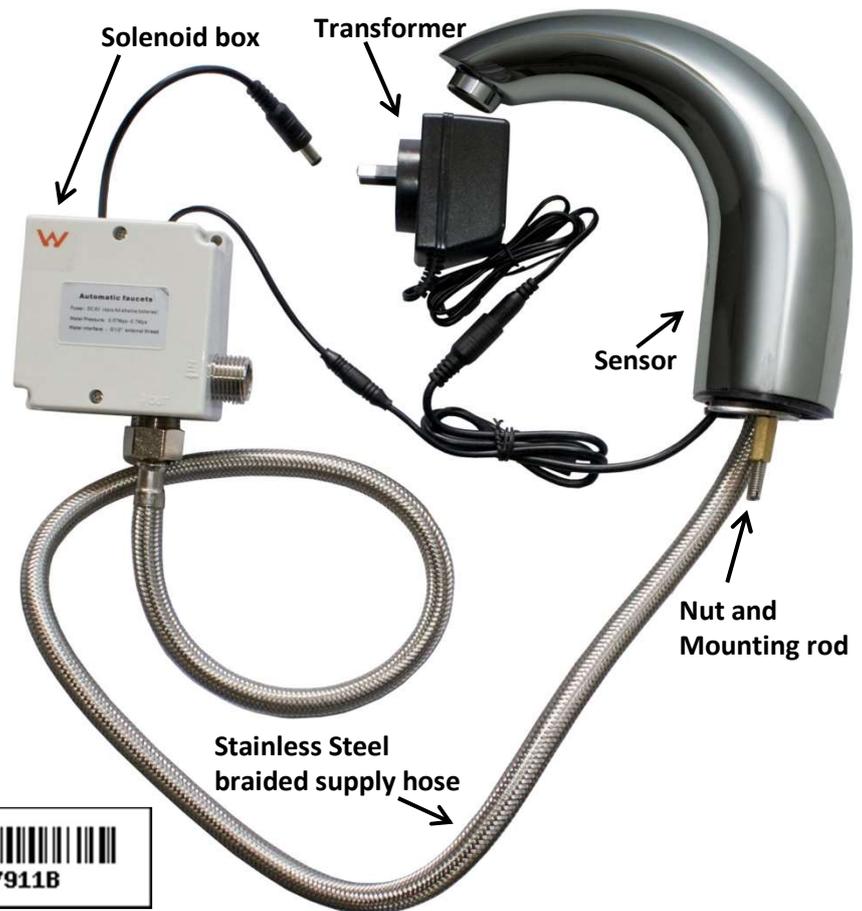

Our versatile and stylish Automatic Sensor Taps are well suited to virtually any environment - whether for personal or professional use. All of our taps are WaterMarked certified with a 6 star WELS water efficiency rating, signifying that the taps are nationally certified whilst also environmentally and economically friendly.



Hands Free Hygiene
P: 1800 782 088 | sales@handsfreehygiene.com.au
Handsfreehygiene.com.au

