

CAT 67305

Tube Design - Chrome Plated Wall Mounted

Features

Up to 70% water saved
Hygienic with zero cross contamination
Touch free and accessible activation
"Plug and play" digital infrared sensor technology
Sensing range automatically adjusts to your environment
Easy installation and supplied with everything required, replaces existing ½" connections
No electrical wiring required, 4 x AA batteries or 240V transformer




Includes


Tube spout with fitted sensor
Solenoid box (fitted solenoid valve and battery housing, batteries not supplied)
Optional 240V transformer
Braided hose
Instruction manual

Specifications

Wall Mounted
Chrome Plated
Standard ½" Connection
10cm Pre-set Sensing Range
Water Pressure: 0.07-0.7Mpa


Available Finishes

-  CAT 67305 – Chrome Plated
-  CAT 67305B – Matte Black
-  CAT 67305G – Gold

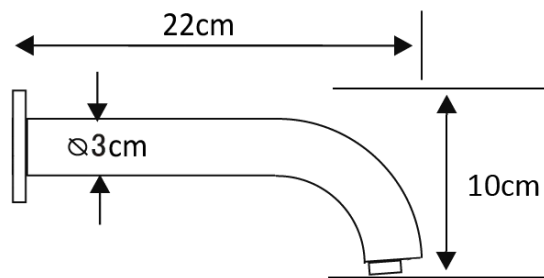

Dimensions

Tube spout - 22cm long
Tap: 10 x 22 x 3cm, 0.5kg
Boxed: 28 x 22 x 9cm, 1.4kg

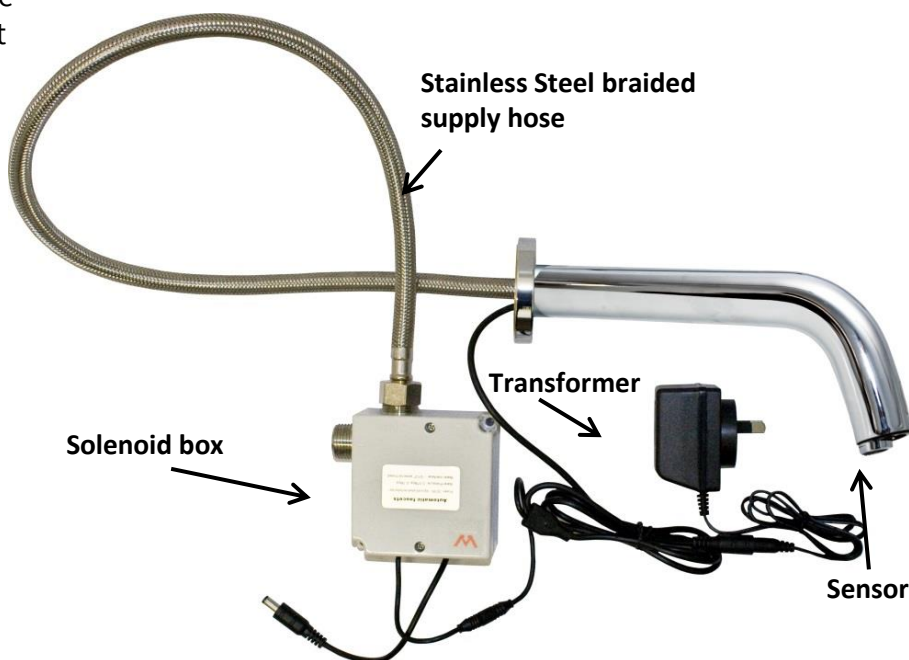

HFH Sensor Taps are Watermarked certified and have been awarded 6 Stars, the highest WELS water efficiency rating. This signifies that our taps are eco-friendly and of the highest quality, being AUS and NZ certified. Our range is DDA compliant when installed in accordance with AS 1428.1 2009.