

FOAM SOAP DISPENSERS

SURFACE

Automatic



DJF0038A
White epoxy finish



DJF0038AB
Matte black epoxy finish



DJF0038AC
Bright finish



DJF0038ACS
Satin finish

General Description

- Automatic wall-mounted foam soap dispenser made of stainless steel AISI 304, 0.8 mm thick and with a total capacity of 1 L. Manufactured in four different finishes (white, black, bright and satin)
- They have a functional, robust and trendy design that matches the new range of Mediclinics bathroom accessories. This allows this soap dispenser to blend into any space perfectly.
- Soap dispensers suitable for high traffic facilities and for public use.
- Operates on 6 AA alkaline batteries (not provided) or **optionally**, with an AC adapter. Order reference DJ0037A/C/CS-TRAFO to receive the automatic soap dispenser able to be connected to the mains with the AC adapter.
- It is recommended to use foam soaps with the following characteristics:
 - Maximum alcohol content of 80%
 - Density between 0.95 and 1.05 kg / dm³
 - Use specific foam products

It does not support foam soaps that contain methanol, chlorine or solid or abrasive particles.

- Screws and plastic plugs to mount on a brick wall supplied.


Components & materials

- DJF0038A:** Stainless steel AISI 304, white epoxy finish.
- DJF0038AB:** Stainless steel AISI 304, black matte epoxy finish.
- DJF0038AC:** Stainless steel AISI 304, bright finish.
- DJF0038ACS:** Stainless steel AISI 304, satin finish.
- COVER:** made of stainless steel AISI 304, 0.8 mm thick.
- WALL PLATE:** made of stainless steel AISI 304, 0.8 mm thick. It is mounted on the wall by means of four Ø4 stainless steel screws (provided) with their corresponding Ø 6mm plastic plugs (also provided).
- INNER PLASTIC TANK:** prevents oxidation and that can be easily removed for cleaning and disinfection purposes.
- INFRA-RED DETECTION:** with a 5 cm hands detection range.
- VALVE:** Anti-drip corrosion resistant valve that dispenses 1.0 ml of soap per service. This anti-drip valve, which dispenses foam soap, is easily interchangeable with the valves of the other soap dispensers of the same line.
- HINGED COVER:** for operator convenience and speed of service. Opening on top with provided Mediclinics key that allows soap refill.
- POWER:** 6 AA alkaline batteries (not provided) or **optionally**, AC adapter. Order reference DJ0037A/C/CS-TRAFO to receive the automatic soap dispenser able to be connected to the mains with the electrical transformer.

Technical specifications

Dimensions	240 x 110 x 120 mm
Capacity	1 L
Body, cover & base plate thickness	0.8 mm
Inner Tank Thickness	2.5 mm
Net weight	1.25 Kg
Quantity dispensed per pump	1.0 ml


Dimensions

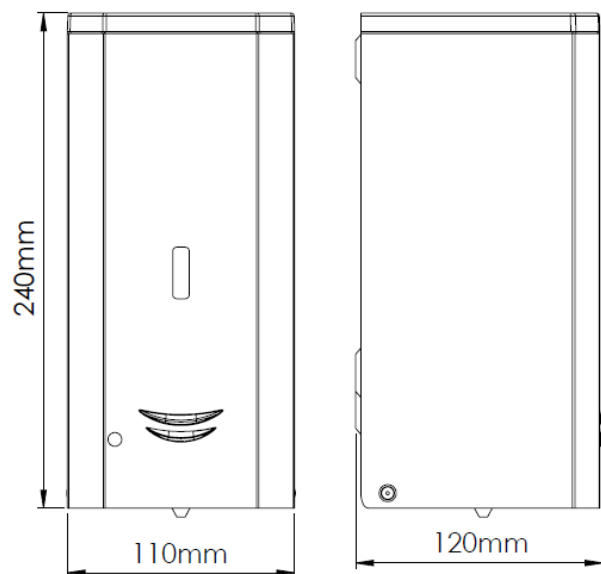

Dimensions: ± 4%

MOUNTING TEMPLATE

Fix the soap dispenser through the holes of the wall and floor plates, using the stainless steel screws supplied and taking into account the distances of the points indicated by an "S" in the next figure:

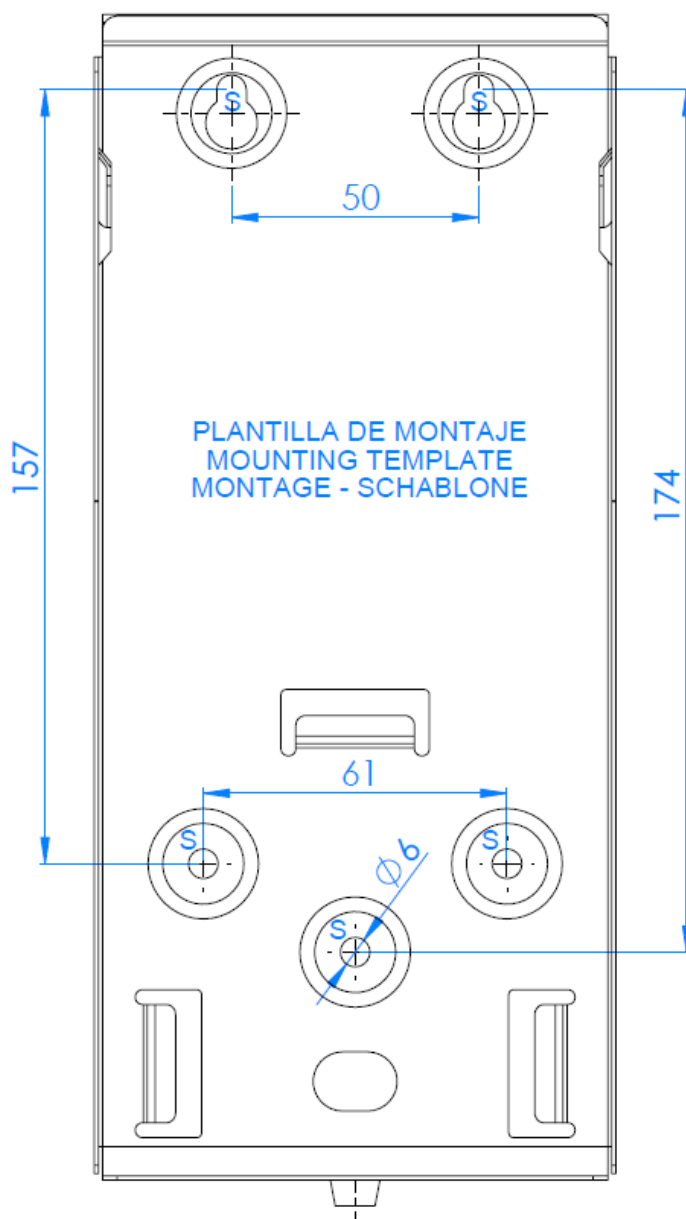

VERY IMPORTANT: do not install this soap dispenser inside the shower, as its electrical components can be seriously damaged by water and the dispenser stops working. If you choose the configuration with an electric converter, install it away from any source of water.

CERTIFICATES AND QUALIFICATIONS



Mediclinics, S.A., reserves the right to make changes and/or modifications to the products and their specifications without prior notice
Review 01-21 © mediclinics S.A.



Hands Free Hygiene

Ph: 1800 039 764

sales@handsfreehygiene.com.au

handsfreehygiene.com.au