

# Enware-Oras Vega Sensor Activated Basin Tap with optional Temperature Adjuster

ENM6222

The stylish Vega touchless basin tap features auto-focus sensing technology, impulse controlled pilot valve and a contemporary, easy to clean design. The Vega sensor tap is supplied set up for single temperature applications with the additional inlet and temperature adjustment lever included for easy on site conversion to a mixer. The Vega is a perfect choice for almost hands free washroom applications. Dual fixing points help reduce the risk of rotation. Choose from mains or battery operated. On this model the battery is within the tap body for protection and easier above the basin maintenance.

## FEATURES

- Auto-focus infrared sensing technology with triangulation for a more consistent, reliable operation
- Improved user friendliness with intelligent activation and after-flow technology
- Low power consumption
- Vandal resistant dual point fixings reduces the risk of rotation in vandal prone applications
- Electronics have IP67 rated protection against water and humidity
- 12V Mains power with 2m lead or 6V battery operated models
- Single temperature set-up supplied standard with mixing lever and extra inlet supplied for easy conversion for temperature adjustable control
- Supplied with WELS 6 Star (5.4lpm) water efficiency rating as standard

## Product Codes

ENM6222	Mains Powered
ENM6250	Battery Operated

## OPTIONS

- Mains Power transformer with 4.5m lead order ENMS230

## Technical Information

Connection	3/8" & 1/2" BSP Flexi Connector
Recommended Working Pressure	100 - 500kPa
Maximum Operating Temperature <sup>^</sup>	70°C
Sensor Range	Optimally Preset using Auto-Focus technology
Mains Powered	12V transformer with 2m lead Input: 100-240V~50/60Hz Output: +12V DC 1000mA
Battery Powered	6V Lithium 2CR5 battery Battery life guide: 4 ± 1 years
Protection Class	IP 67
Max Flow Period	2 Minutes

<sup>^</sup> Enware tapware must be installed in accordance with the provisions of, AS/NZS3500 and any relevant local regulations. Installations not complying with AS/NZS3500 may void the product and performance warranty provisions. Heated Water supply AS/NZS 3500.4.


For all sanitary fixtures used primarily for personal hygiene purposes are to deliver heated water not exceeding:

- a) 45°C for early childhood centres, primary and secondary schools, nursing homes or similar facilities for young, aged, care, sick or people with disabilities (43.5°C - NSW Health)  
b) 50°C in all other buildings.

Version: OCT12



Note pictured here with the optional temperature adjustment lever.

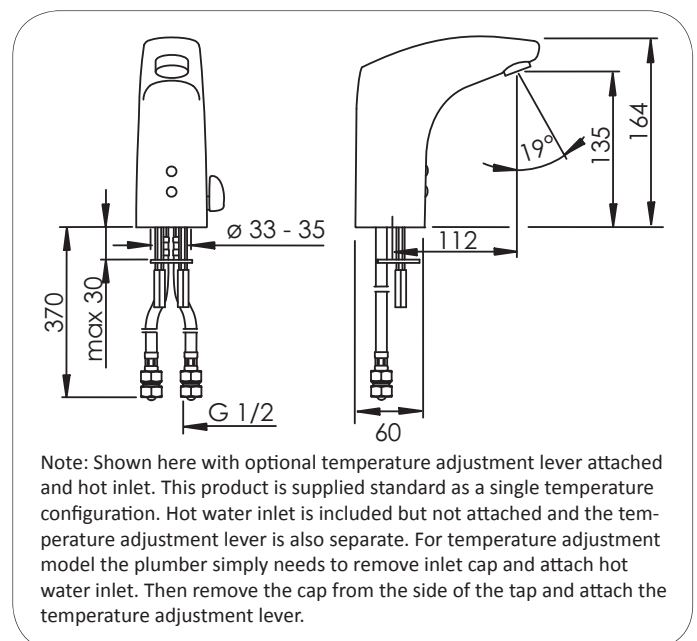

Hands Free Hygiene

P: 1800 782 088 | sales@handsfreehygiene.com.au

Handsfreehygiene.com.au

  
hands free hygiene  
clean hands, safe hands